
TALL SHOWCASE

Item # DDKIT4

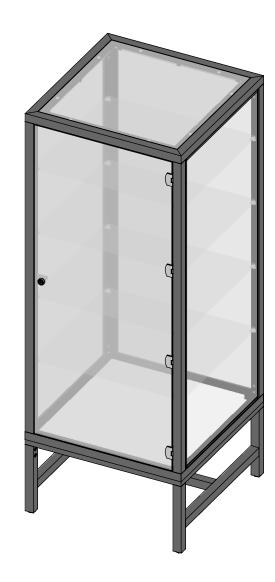



2 PEOPLE REQUIRED FOR ASSEMBLY

INCLUDED HARDWARE





1/4"-20 x 1 1/8" L CSK SOCKET HEAD SCREW



8X

1/4"-20 x 5/8" L LOW PROFILE SOCKET HEAD CAP SCREW



16X SHELF SUPPORT

CLIPS



4X

3/8-16 X 1" L METAL LEVELER



4X

1/4"-20 x 1/2" L LOW PROFILE SOCKET HEAD CAP SCREW



1X


CAM LOCK ASSEMBLY




12X


SET SCREW

TOOLS INCLUDED

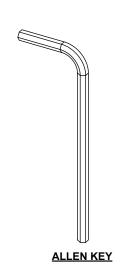


TOOLS REQUIRED

 


 


Item # DDKIT4 SHEET 1 OF 7 ENSURE THAT ALL (4) LEVELERS ARE PROPERLY SCREWED INTO THE BOTTOM OF THE LEGS.

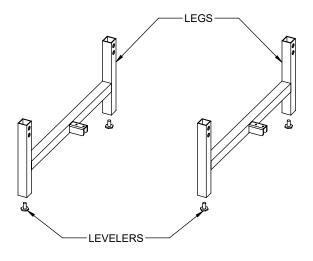



MOUNT THE (2) LEGS TOGETHER USING THE CROSSBAR.

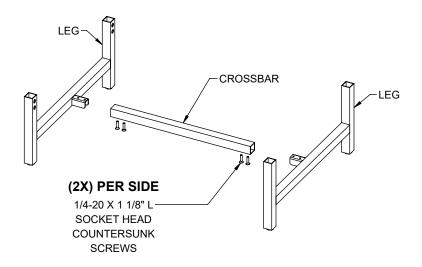

3MOUNT SHOWCASE BASE TO THE LEGS.

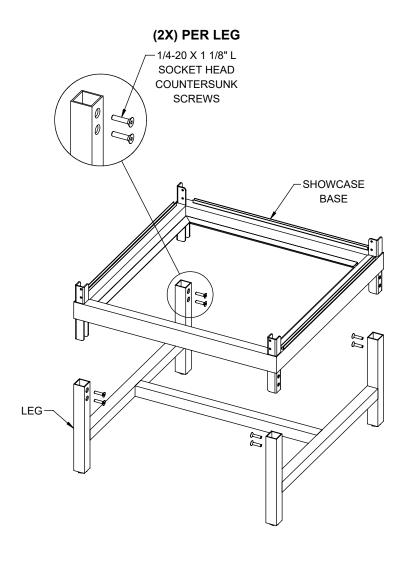

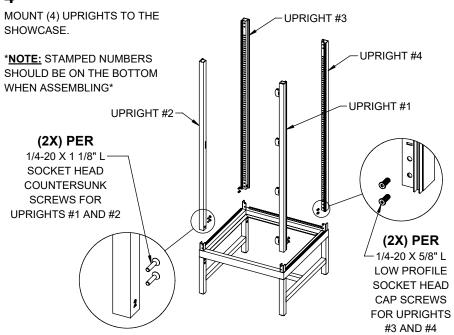

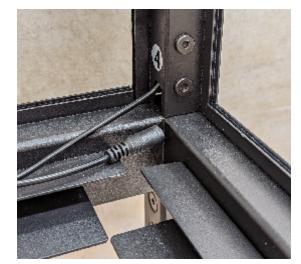



*NOTE: ENSURE THAT THE WIRE THAT EXITS
THE BOTTOM OF THE UPRIGHT MOUSEHOLE
DOES NOT PINCH ANYWHERE.*

5

LAY THE FRAME ON ITS SIDE WITH THE **DOOR HINGES <u>FACING UP</u>**, AND CAREFULLY SLIDE IN THE GLASS PANELS.


NOTE: WE RECOMMEND LAYING SOMETHING ON THE FLOOR TO PROTECT THE FINISH OF THE SHOWCASE

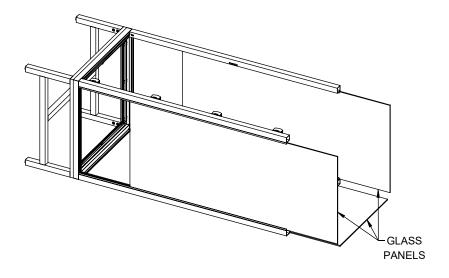


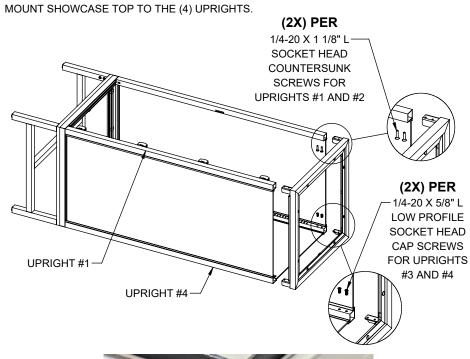




NOTE: MAKE SURE TO CONNECT THE TOP LEDS TO THE PRE-INSTALLED WIRE IN UPRIGHT #4. EXCESS WIRE CAN BE STUFFED INTO THE TUBE THROUGH THE MOUSEHOLE

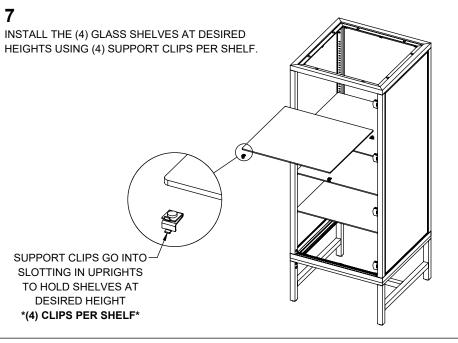

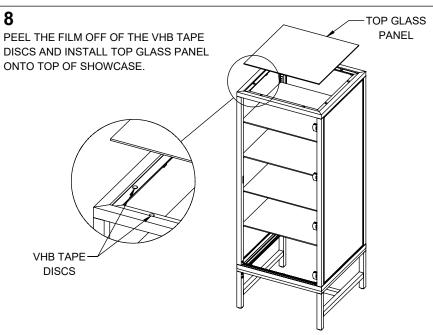

MOUNT POWER SUPPLY MOUNTING BRACKET TO THE SHOWCASE FLOOR PANEL USING (4) 1/4-20 X 1/2" L LOW PROFILE SOCKET HEAD CAP SCREWS.

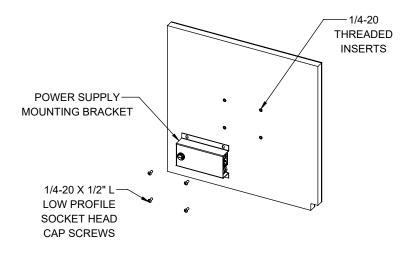




NOTE: WIRE WILL CONNECT TO THE WIRE AT THE BOTTOM OF UPRIGHT #4 WHEN INSTALLED

10


INSTALL SHOWCASE FLOOR PANEL INTO
THE BOTTOM OF THE SHOWCASE WITH
THE POWER SUPPLY MOUNTING
BRACKET FACING THE DOWN.

*NOTE: THE NOTCH SHOULD BE LOCATED
IN THE BACK RIGHT OF THE SHOWCASE*

ACRYLIC—
SURFACE
FACES UP

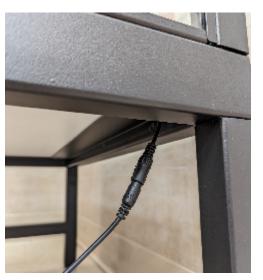


NOTE: MAKE SURE TO CONNECT THE WIRE FROM THE POWER SUPPLY TO THE WIRE COMING OUT THE BOTTOM OF UPRIGHT #4

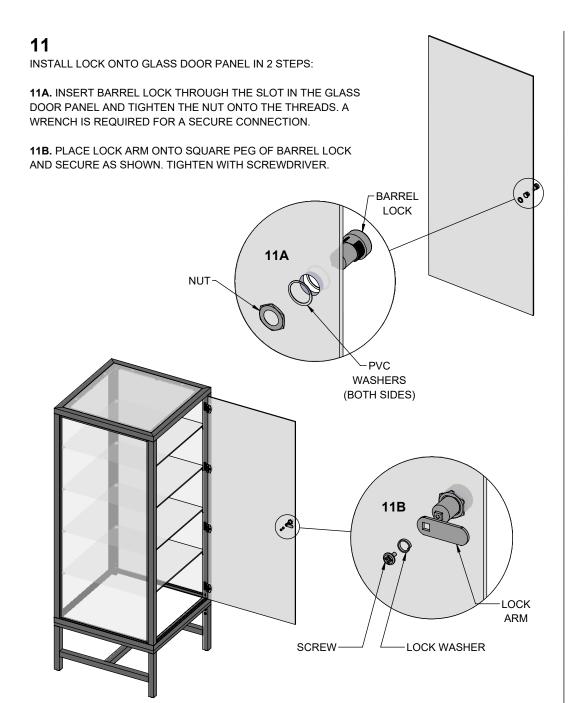

NOTE: 2 PEOPLE ARE REQUIRED FOR THIS STEP

12

INSERT RUBBER SPACER BETWEEN THE HINGE AND THE GLASS DOOR PANEL. THEN, TIGHTEN USING (3) SET SCREWS PER HINGE.

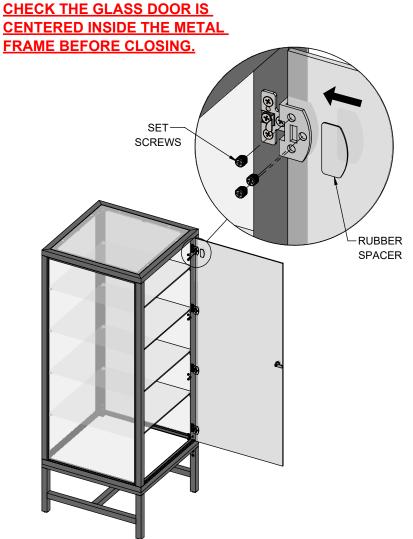

TROUBLE SHOOTING INSTRUCTIONS

1

CHECK CONNECTION BETWEEN LED LIGHTS AND WIRE INSIDE OF UPRIGHT #4 (CONNECTION FROM <u>STEP 6</u>.)

TRY TURNING ON LIGHTS AGAIN. IF LIGHTS DO NOT TURN ON, GO TO NEXT STEP.


2

CHECK CONNECTION BETWEEN MOUNTING BRICK AND WIRE INSIDE OF UPRIGHT #4 (CONNECTION FROM <u>STEP 10</u>.)

TRY TURNING ON LIGHTS AGAIN. IF LIGHTS DO NOT TURN ON, GO TO NEXT STEP.

3

UNMOUNT MOUNTING BRACKET.
CUT ZIP TIE HOLDING BUNDLE OF WIRES TOGETHER.

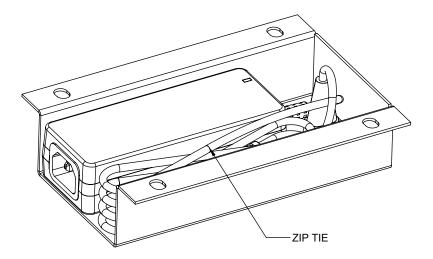

4

UNPLUG AND RECONNECT THE POWER ADAPTER TO THE SWITCH.

TRY TURNING ON LIGHTS AGAIN. IF LIGHTS DO NOT TURN ON, PLEASE CONTACT SUPPLIER FOR REPLACEMENT PARTS.

