



**ASSEMBLY
INSTRUCTIONS FOR:
RZK8SLF**

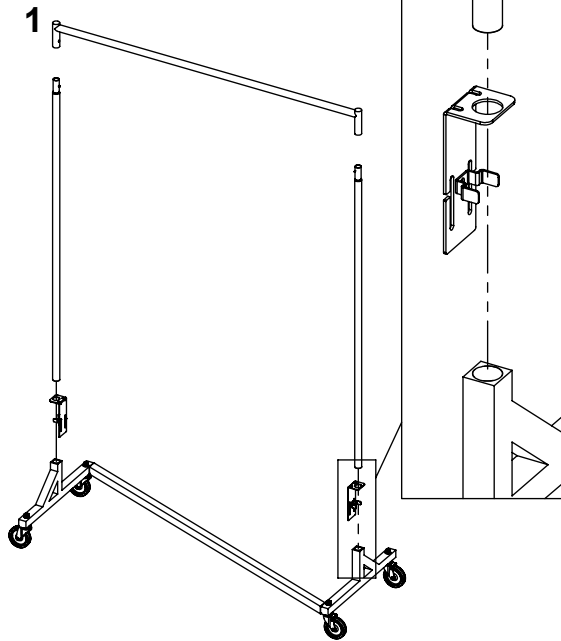

INSERT UPRIGHTS INTO HOLE
ON THE BRACKETS AND THEN
INTO THE HOLES IN THE BASE.


2

SLIDE HOOKED WIRE ON BACK OF SHELF
INTO OPENING IN THE METAL BRACKET
AND DROP DOWN INTO SLOT.

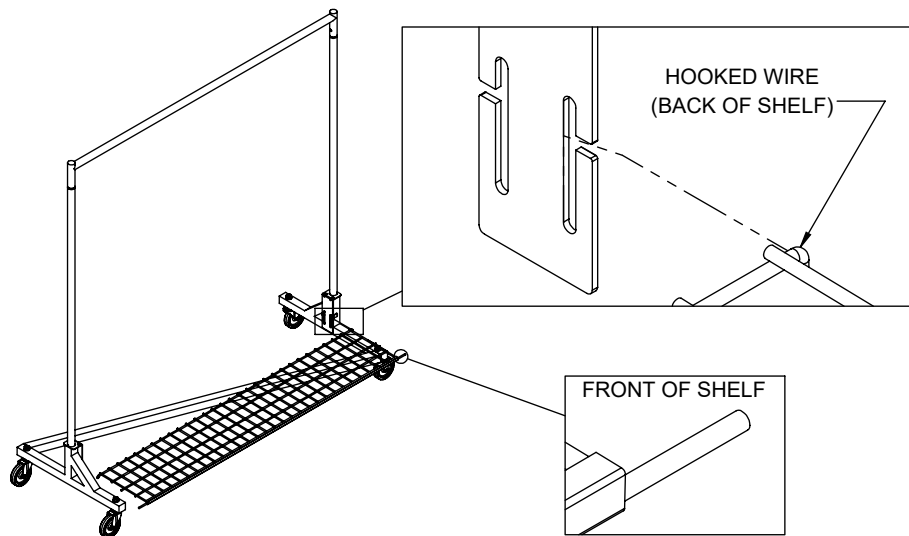

3

REPEAT PREVIOUS STEP WITH REMAINING SHELF ON THE OTHER SIDE.

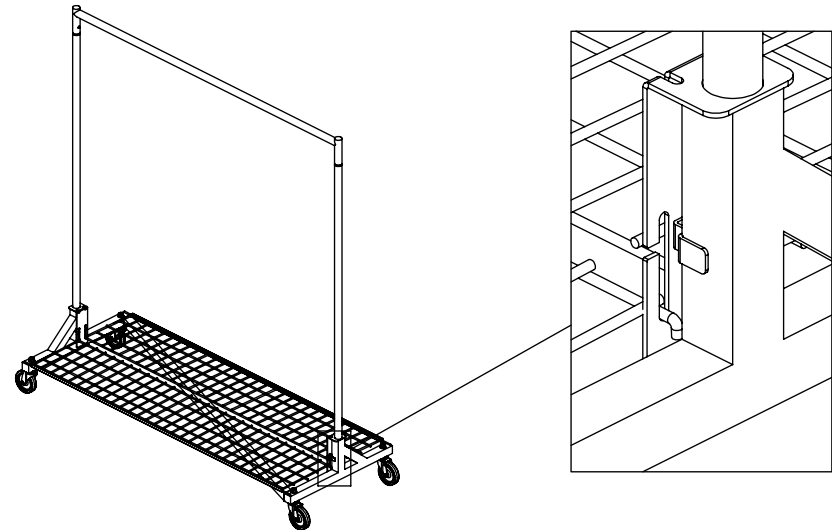

4

TO PUT SHELF IN UPRIGHT POSITION ROTATE THE SHELF
UPWARD SO THAT THE MIDDLE WIRE SITS IN GROOVE.

