
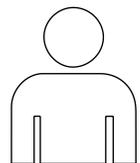



20"L X 20"D X 38"H CORNER BLOCK

Item # PW-WCB20 (-BK, -WH, -MP)

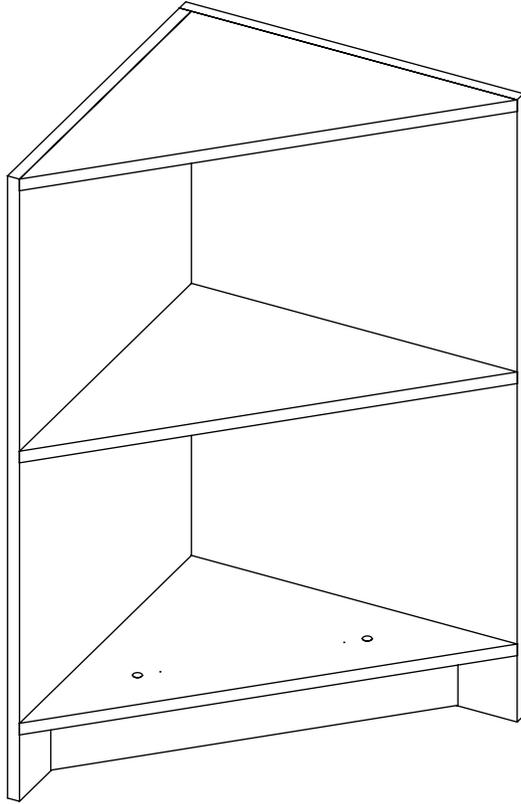

**2 PEOPLE
REQUIRED
FOR
ASSEMBLY**


INCLUDED HARDWARE




14X
WOOD DOWEL



19X
STICKER




17X
WOOD SCREW (LONG)



2X
WOOD SCREW (SHORT)

TOOLS REQUIRED


SCREWDRIVER

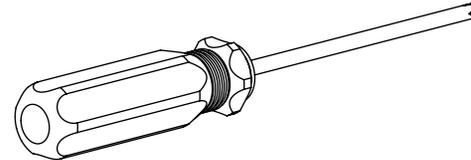

1


INSERT DOWELS.
INSERT SHELVES.

**NOTE: PANEL IS
ABOUT 19 1/4"**

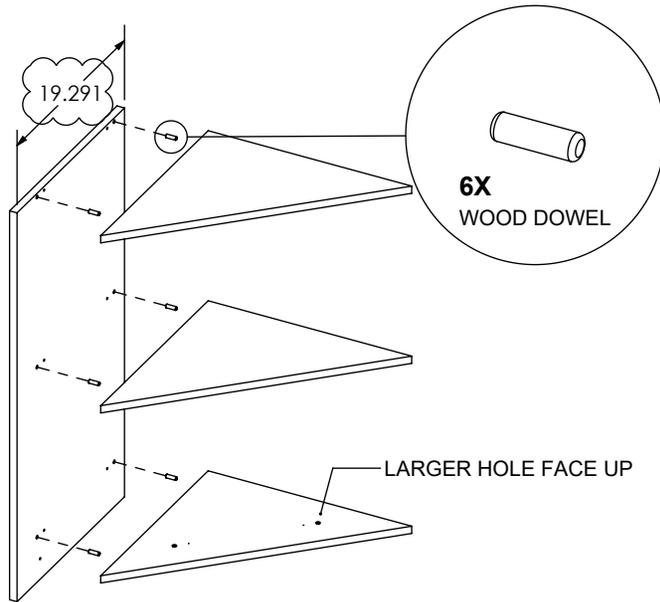


2

INSERT DOWELS
INSTALL SECOND PANEL.

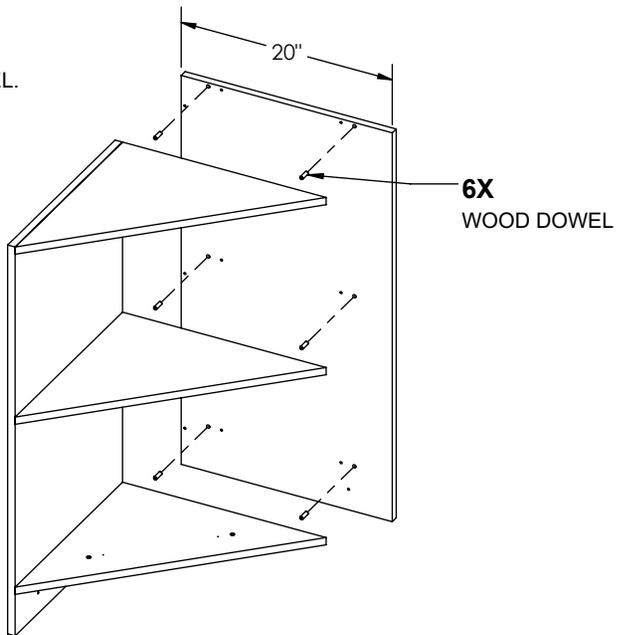

3


USE WOOD SCREWS TO
SECURE ALL PANELS
TOGETHER

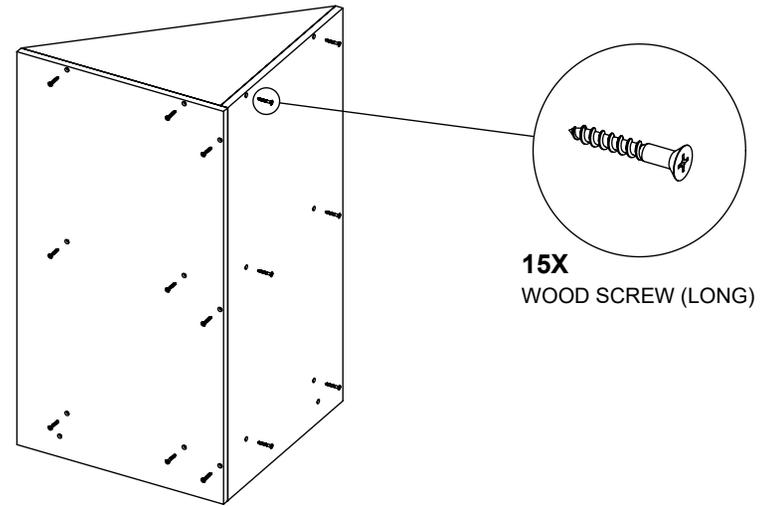

NOTE: BACK VIEW


4

INSERT WOOD DOWELS TO TOE KICK.

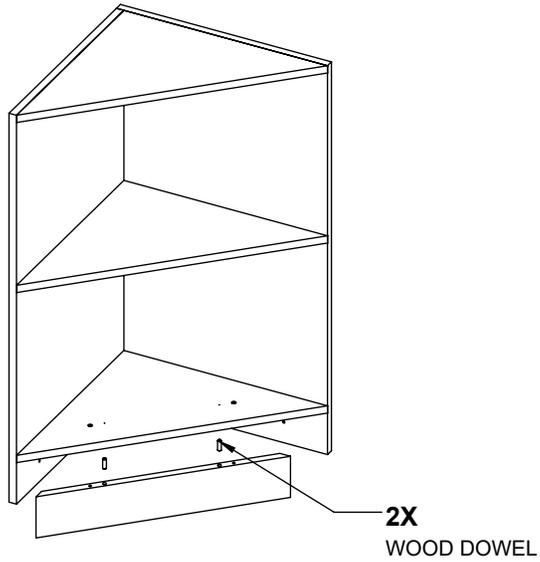


5

USE WOOD SCREWS TO SECURE TOE KICK FROM THE SIDES.

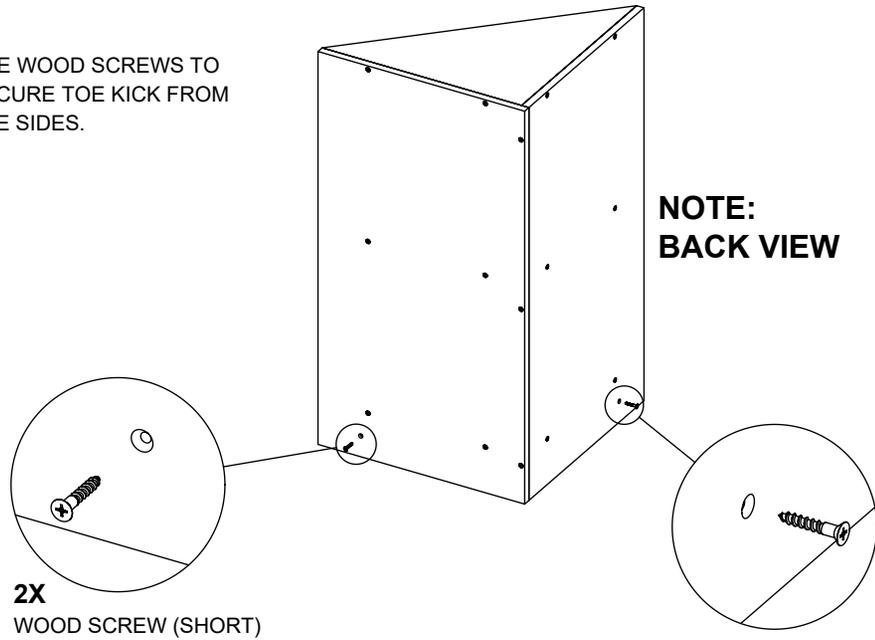

6

USE WOOD SCREWS TO SECURE TOE KICK FROM THE TOP.

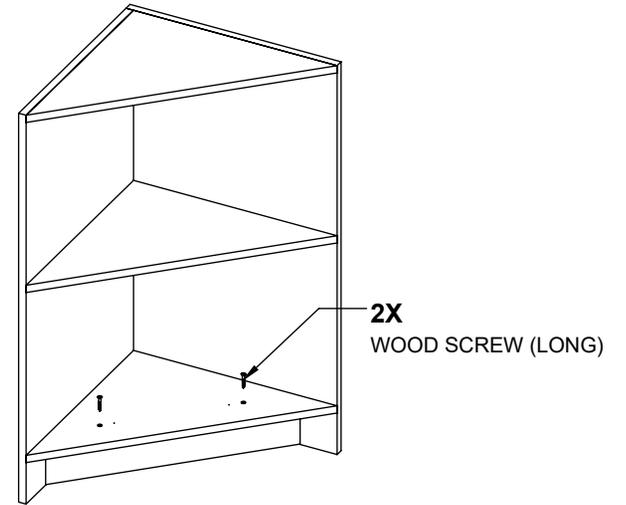

7

APPLY STICKERS OVER SCREWS FROM PREVIOUS STEPS.

