


**PIPELINE ETAGERE with
ADD-ON HANG FOLD ATTACHMENT**


PSETG

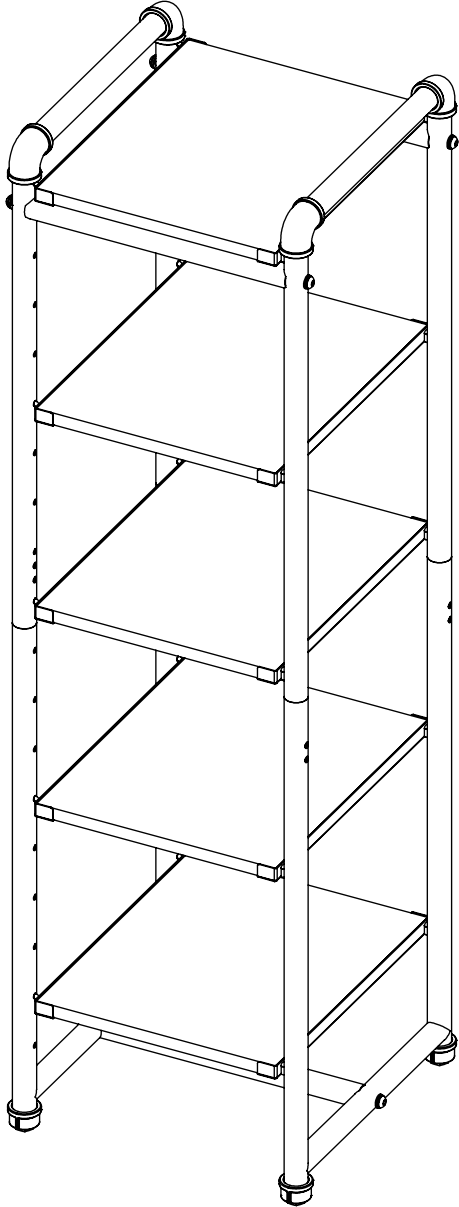


INCLUDED HARDWARE




16X
1/4"-20 x 1" L
SET SCREW

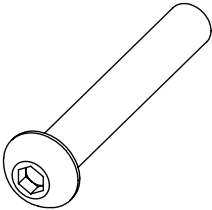

6X
3/8-16 X 2.5" L SOCKET BUTTON
HEAD CAP SCREW

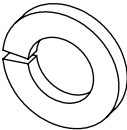


6X
3/8" LOCK WASHER

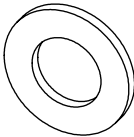

6X
3/8" FLAT WASHER

TOOLS REQUIRED

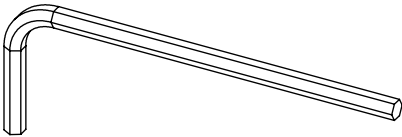

LARGE ALLEN KEY




SMALL ALLEN KEY

1


MOUNT LOWER UPRIGHT
TO UPPER UPRIGHT USING
1/4-20 X 1" L SET SCREWS.

***REPEAT THIS STEP WITH
OTHER SET OF UPRIGHTS***

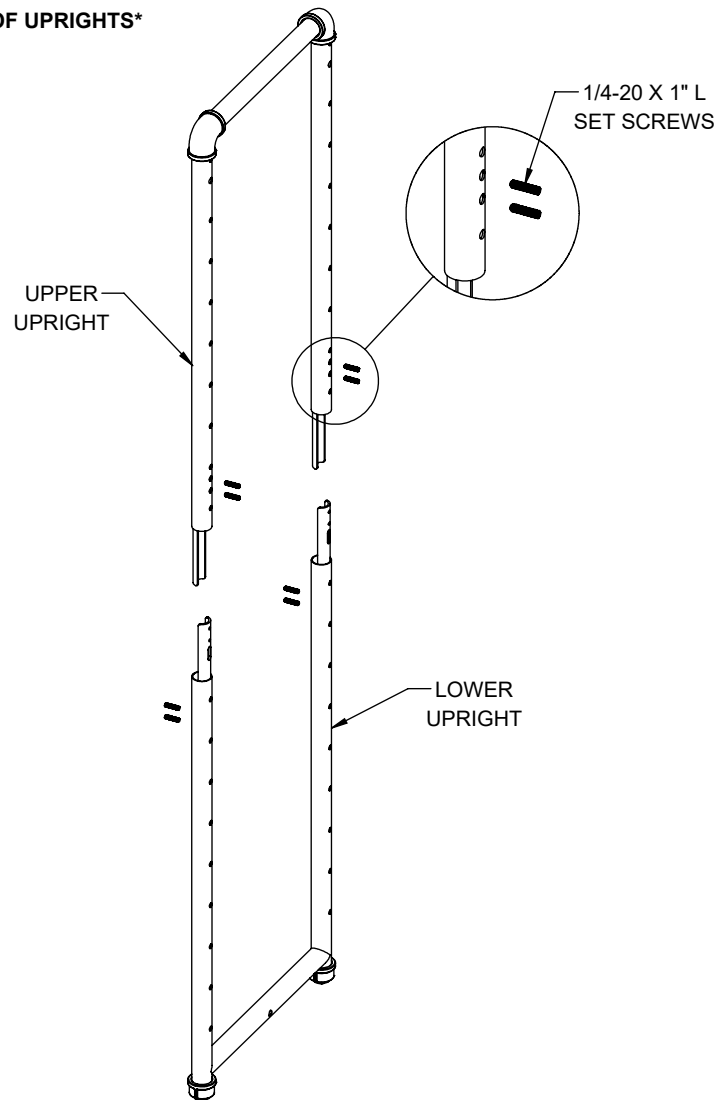

2


CONNECT YOUR END FRAMES
USING CROSSBARS, 3/8" FLAT
WASHERS, 3/8" LOCK WASHERS,
AND 3/8-16 X 2.5" L SOCKET
BUTTON HEAD CAP SCREWS.

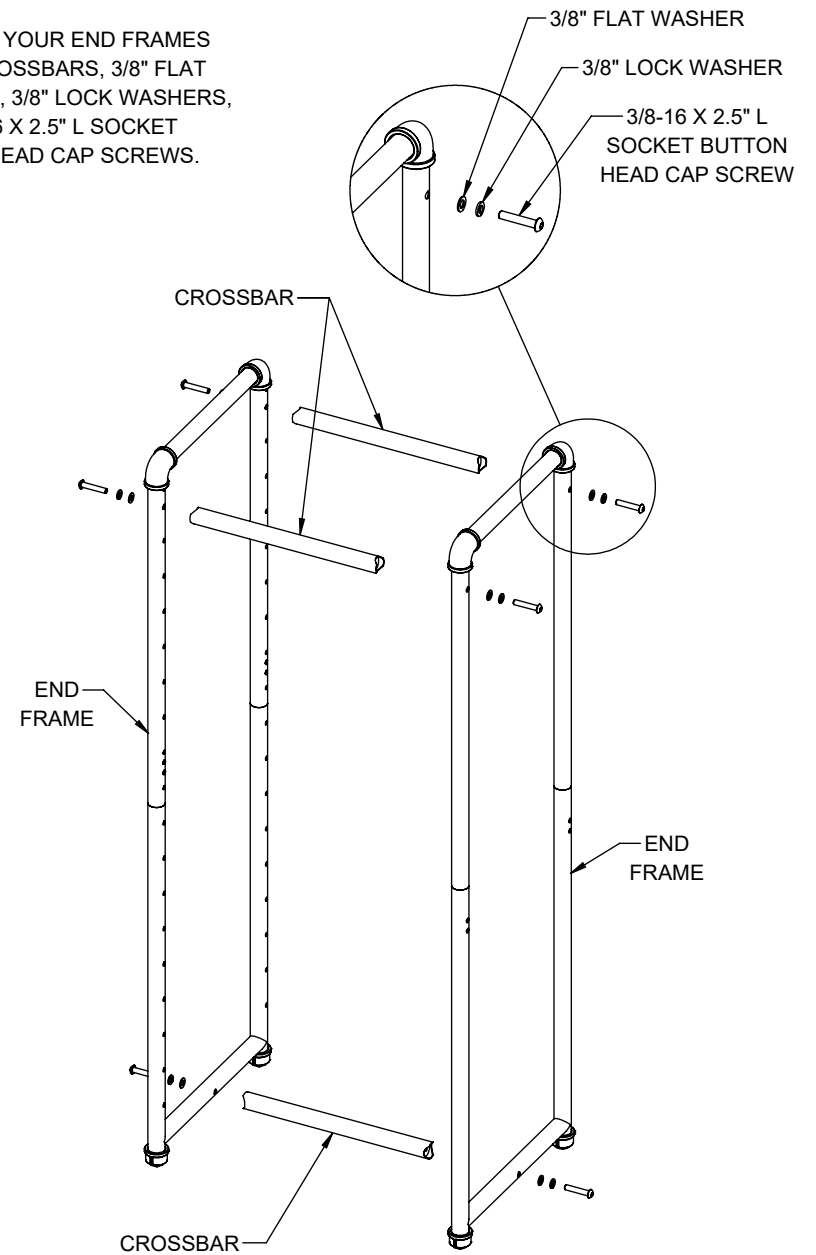

3


MOUNT SHELF RESTS IN THE TOP HOLES OF THE UPRIGHTS ABOVE THE UPPER CROSSBARS.

NOTE: THE SHELF RESTS MUST BE ANGLED INTO THE HOLES, AND THEN ROTATED DOWN TO LOCK THEM INTO PLACE

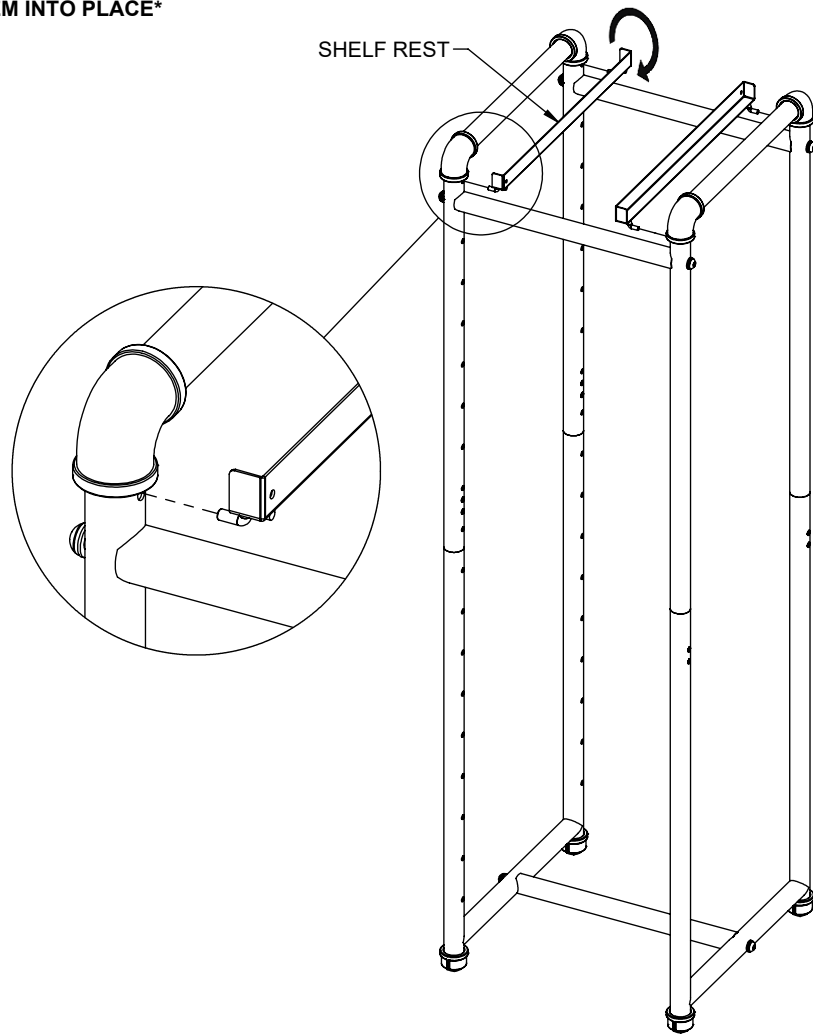

4


MOUNT THE REMAINING SHELF RESTS AT THE DESIRED HEIGHTS FOLLOWING THE SAME DIRECTIONS AS SHOWN IN STEP 3.

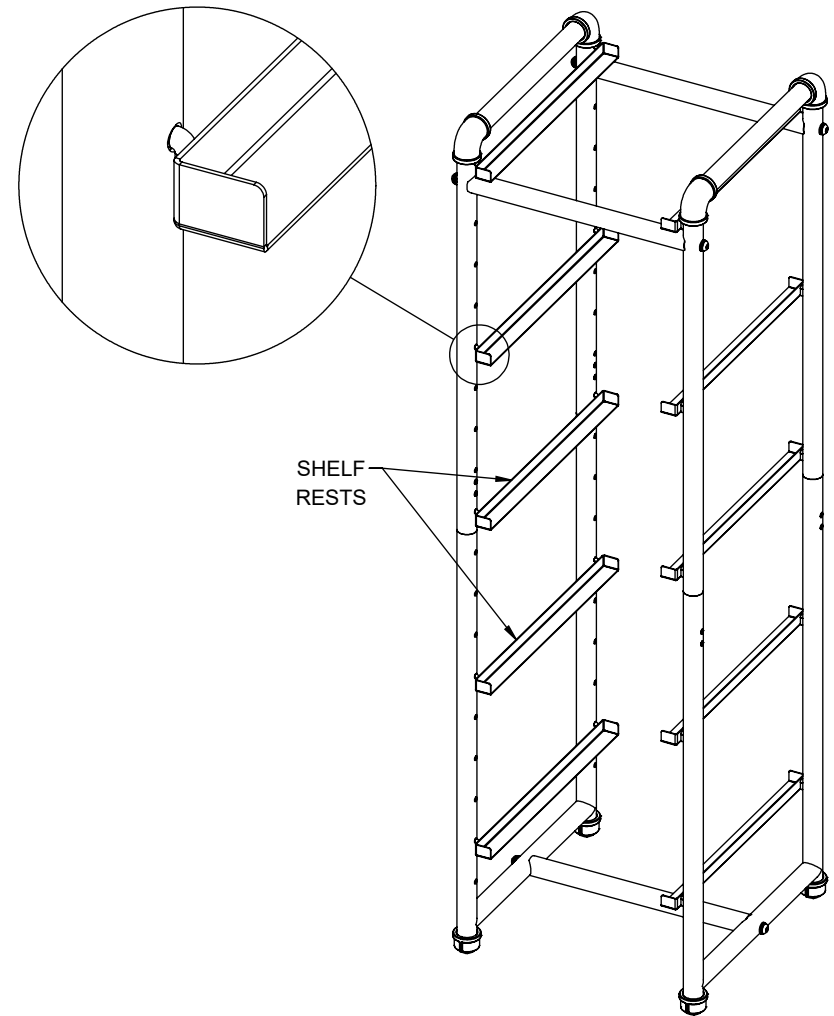

5



PLACE WOODEN SHELF PANELS
ONTO SHELF RESTS.

ASSEMBLY IS NOW COMPLETE

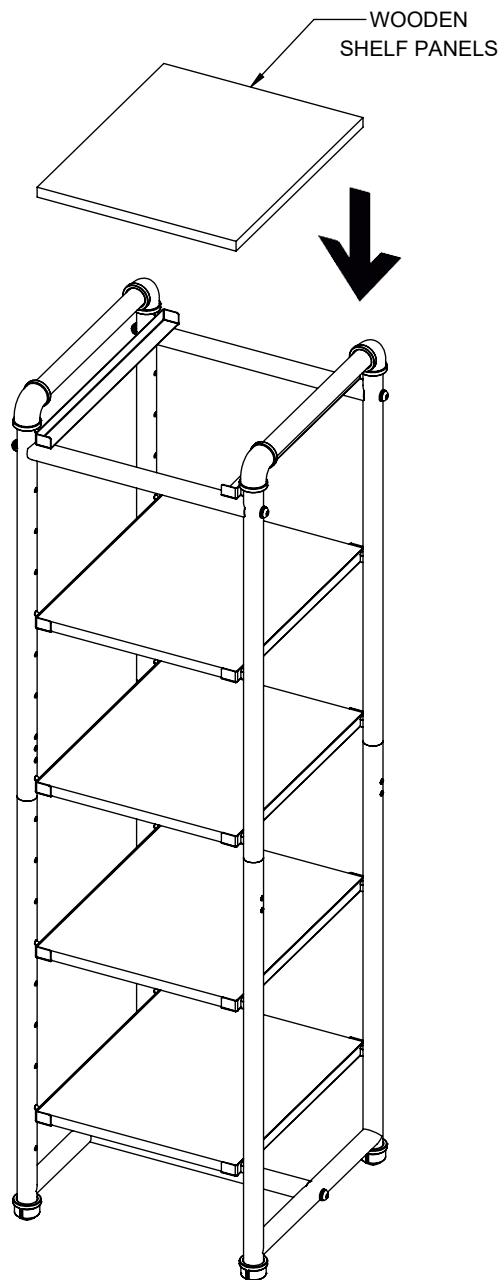


Pipeline Etagere Add-On Hang Fold Attachment


Item # PSETGHR(F)

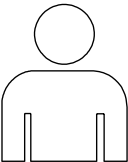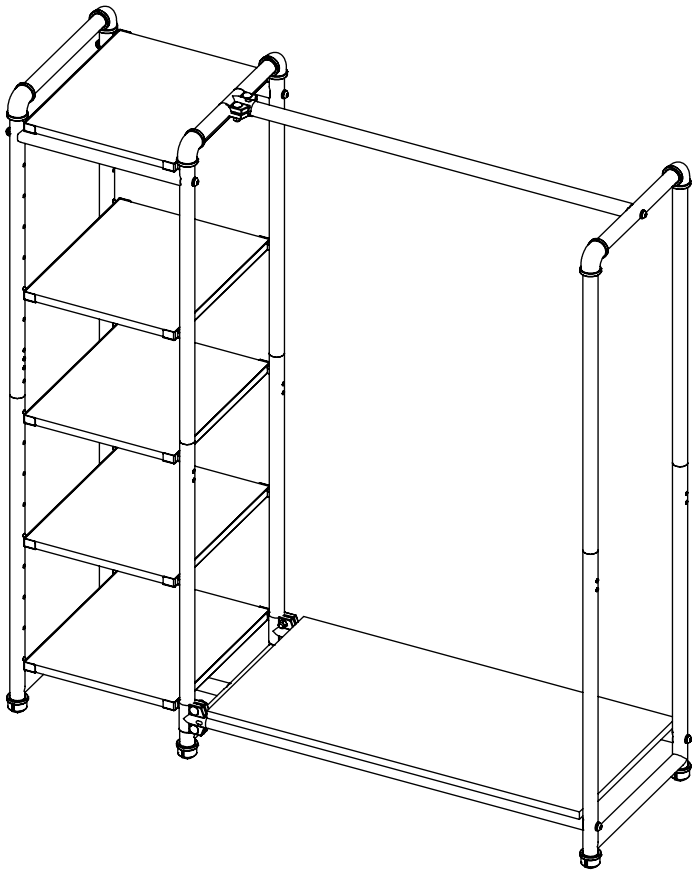



2 PEOPLE
REQUIRED
FOR
ASSEMBLY


INCLUDED HARDWARE


- 

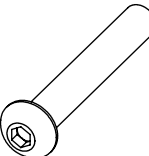
8X
1/4"-20 x 1" LONG
SET SCREW
- 

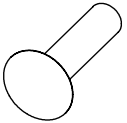3X
3/8"-16 x 2.5" LONG
SOCKET BUTTON
HEAD CAP SCREW
- 

6X
3/8-16 X 1.5" LONG
CARRIAGE BOLT
- 


4X
1/4"-20 x 0.5" LONG
SOCKET HEAD CAP SCREW
- 

3X
3/8" LOCK WASHER
- 

6X
3/8" WASHER NUT
WITH TEETH
- 

3X
3/8" FLAT WASHER


TOOLS REQUIRED

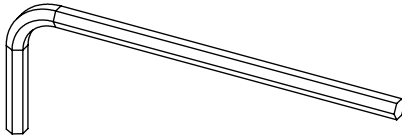

LARGE ALLEN KEY



SMALL ALLEN KEY

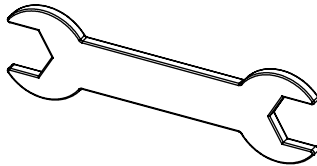


WRENCH

1


MOUNT LOWER UPRIGHT TO UPPER UPRIGHT.

***ENSURE THAT BOTH LEVELERS ARE
PROPERLY SCREWED INTO THE BOTTOM***

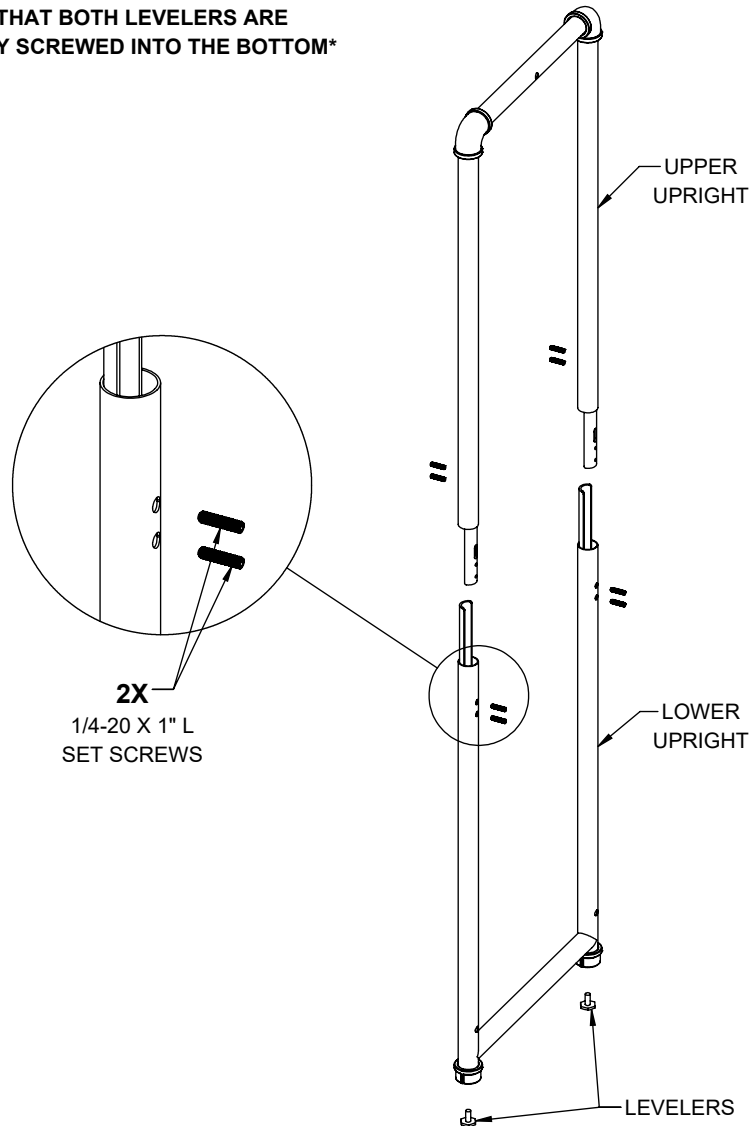


2

REST THE WELDED CLAMP SIDE OF THE CROSSBAR ON
TO THE TOP OF THE ETAGERE, AND CONNECT THE END
FRAME TO THE OTHER SIDE OF THE CROSSBAR.

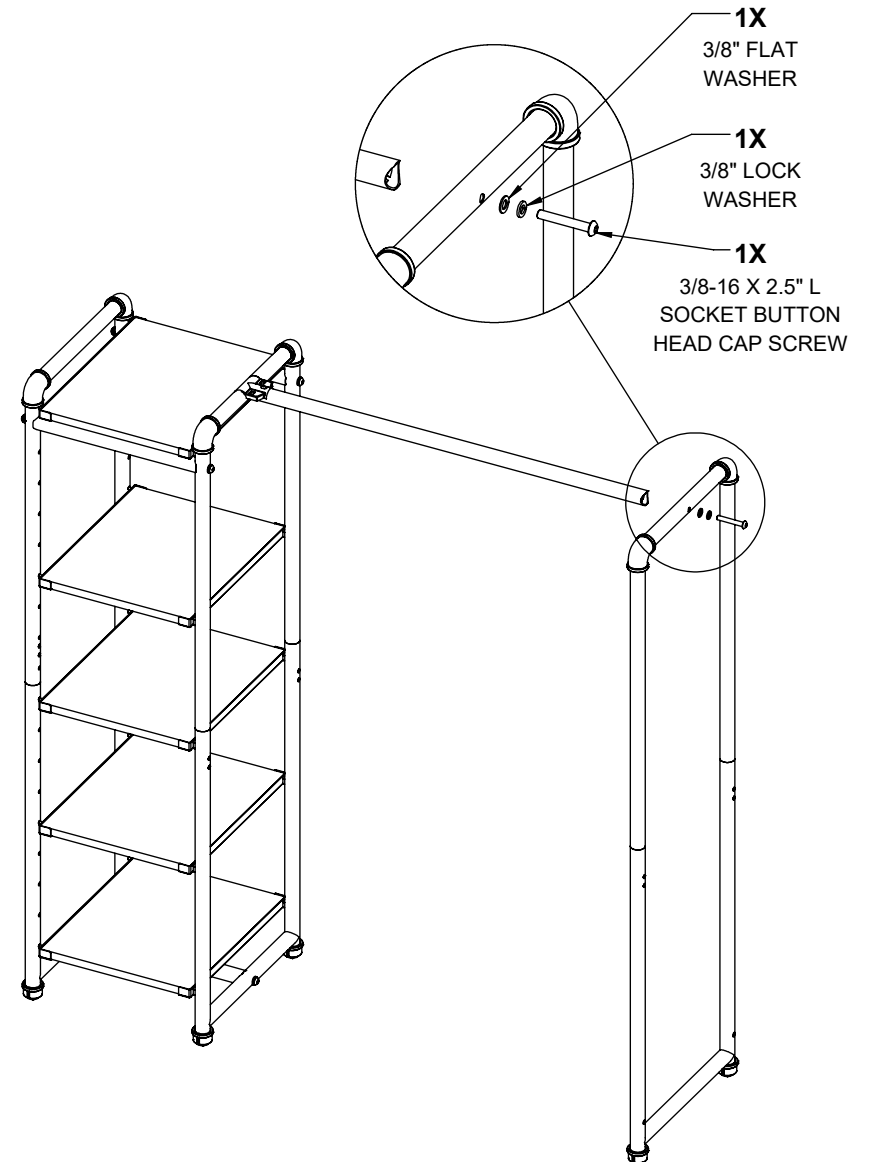

3

FASTEN THE CLAMP IN PLACE.

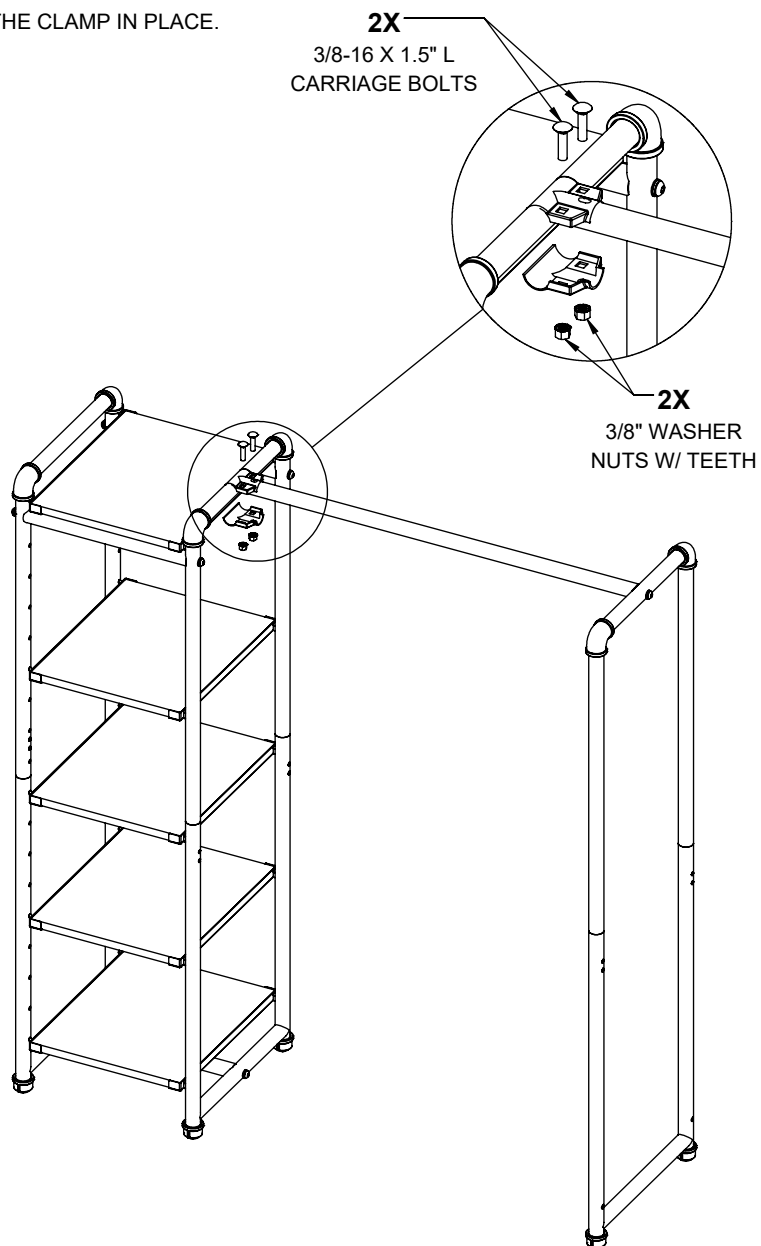


4A

FASTEN THE LOWER FRONT CROSSBAR CLAMP TO THE ETAGERE.


4B

THEN, CONNECT THE CROSSBAR TO THE END FRAME.

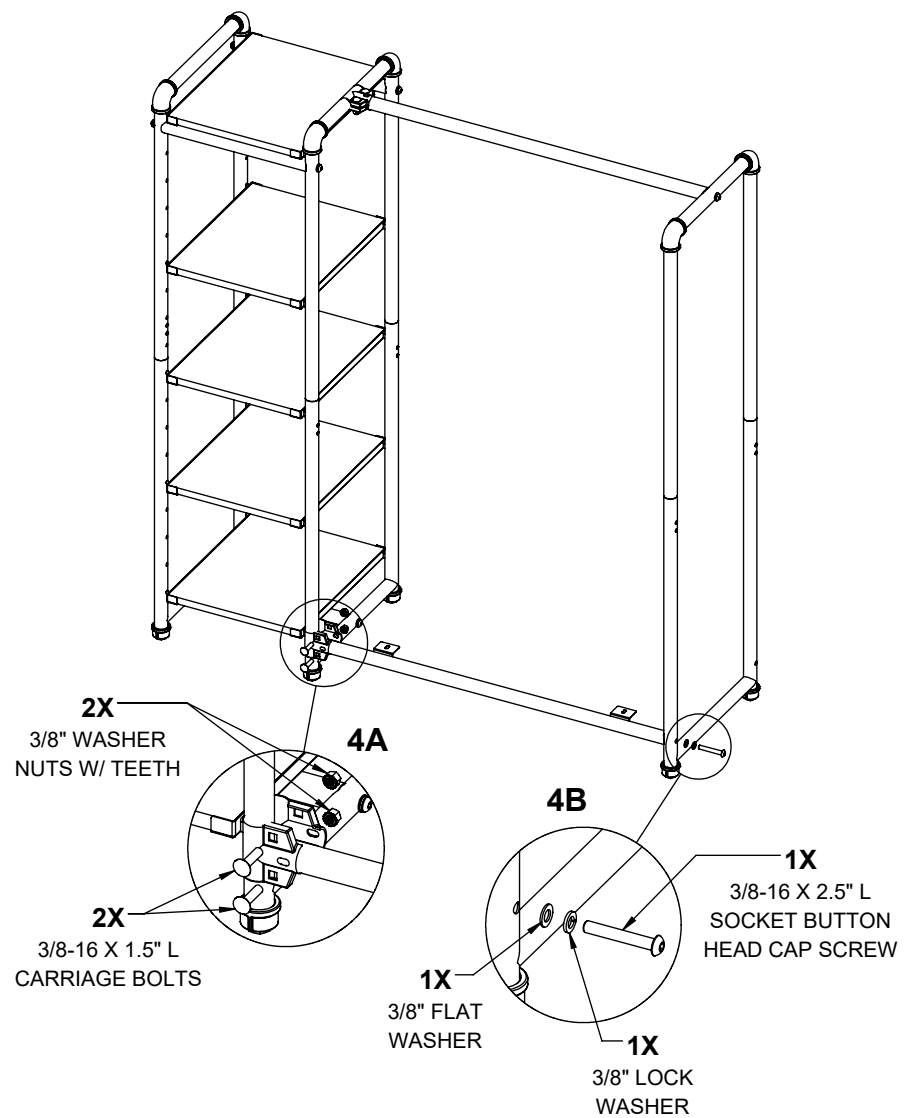

5

REPEAT THE PREVIOUS STEP FOR THE OTHER CROSSBAR.

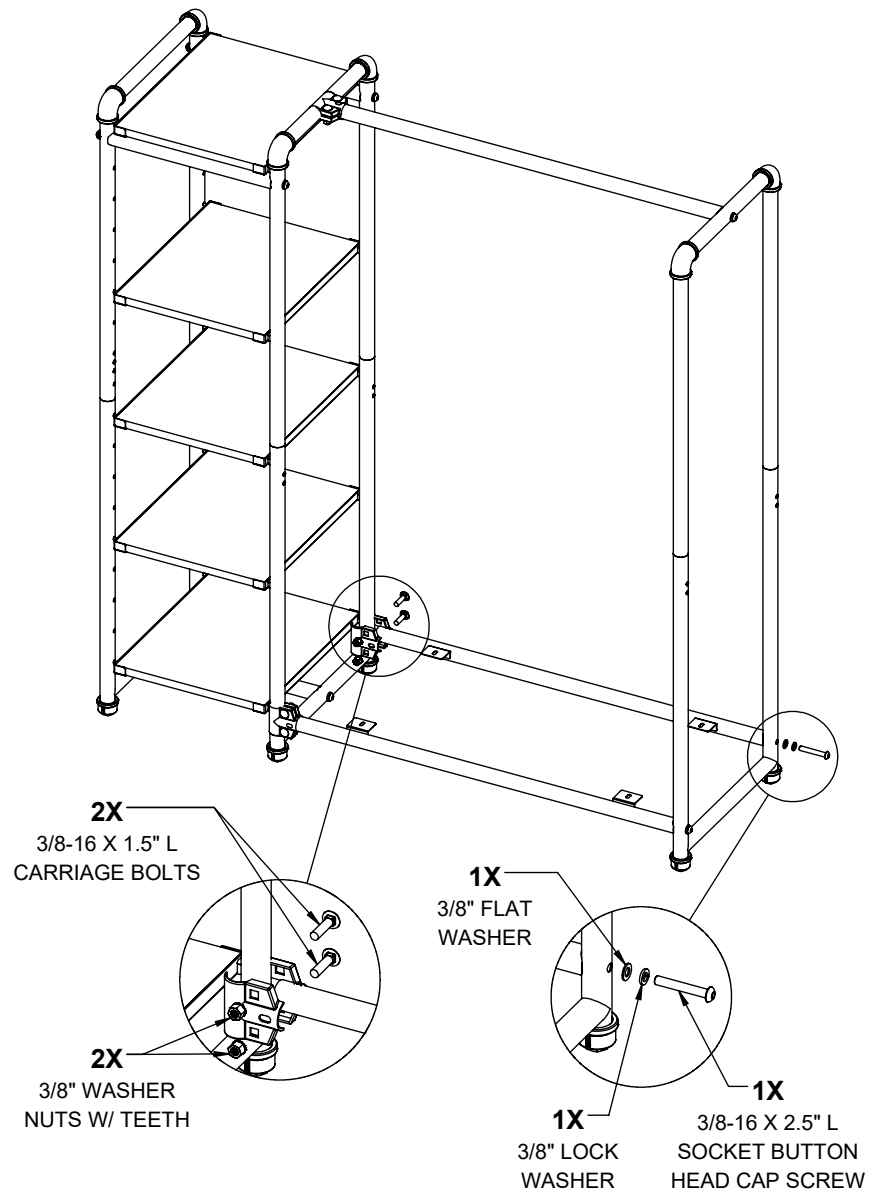

6

MOUNT THE SHELF PANEL TO THE LOWER CROSSBARS.

ASSEMBLY IS NOW COMPLETE

