
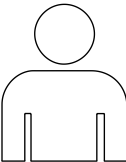


**BANNER KIT FOR
#APFS96**


Item # APFS96BN

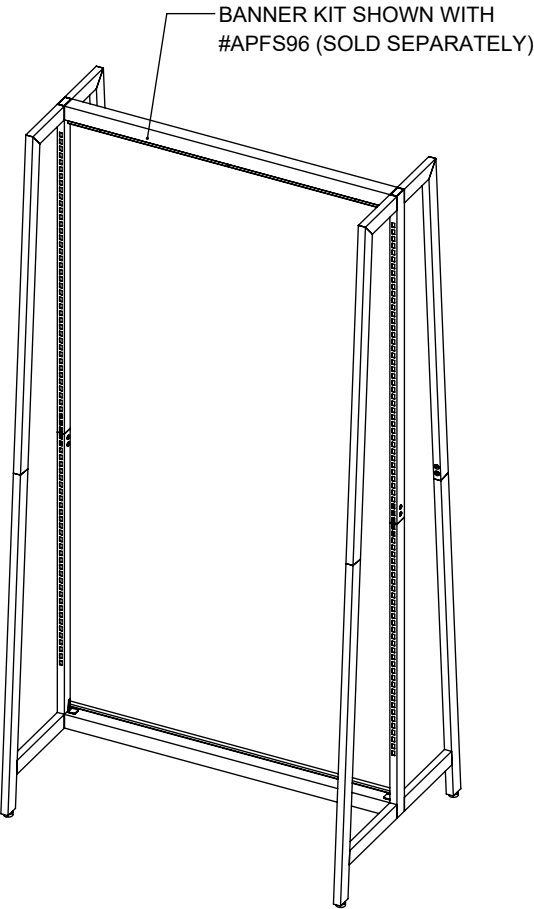



**2 PEOPLE
REQUIRED
FOR
ASSEMBLY**

INCLUDED HARDWARE

2X
BANNER
RETAINING
BRACKET

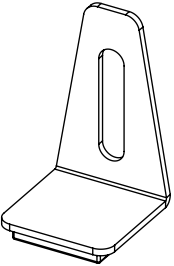


1X
3mm ALLEN KEY

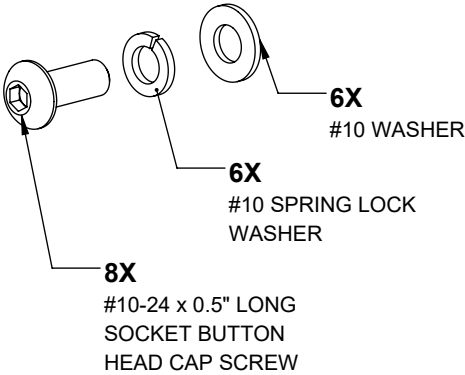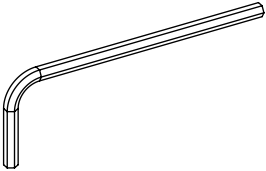


1

- UNROLL BANNER
- IDENTIFY TOP AND BOTTOM

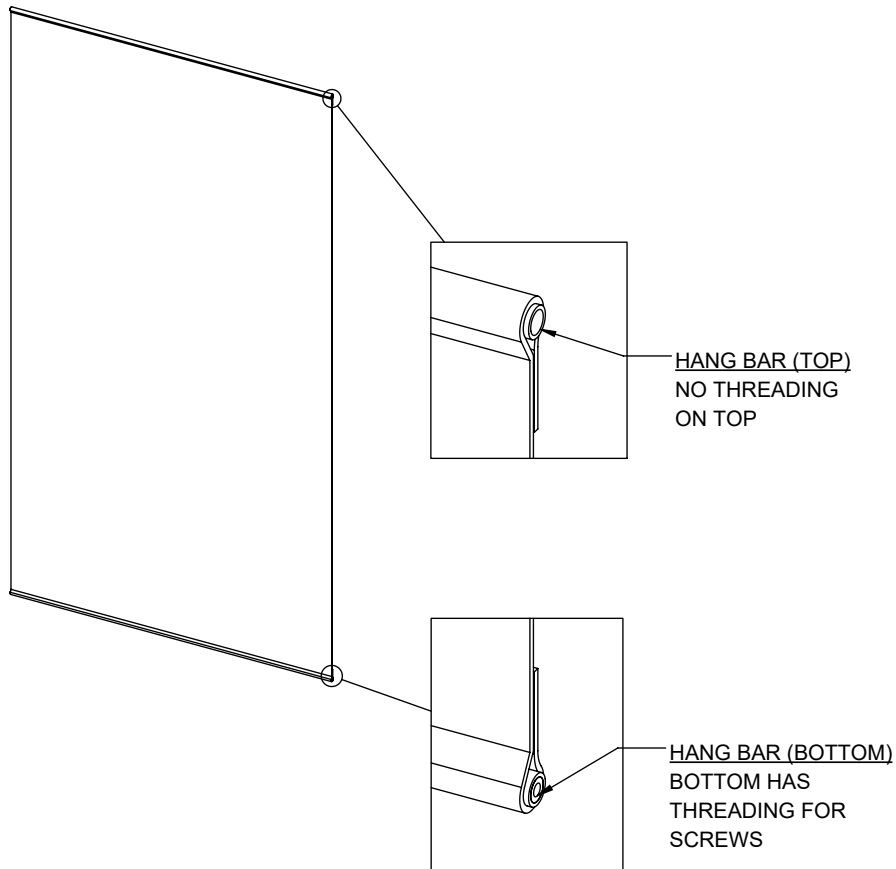

2


- SLIDE BANNER MOUNTING BRACKET
INTO TOP OF BANNER.

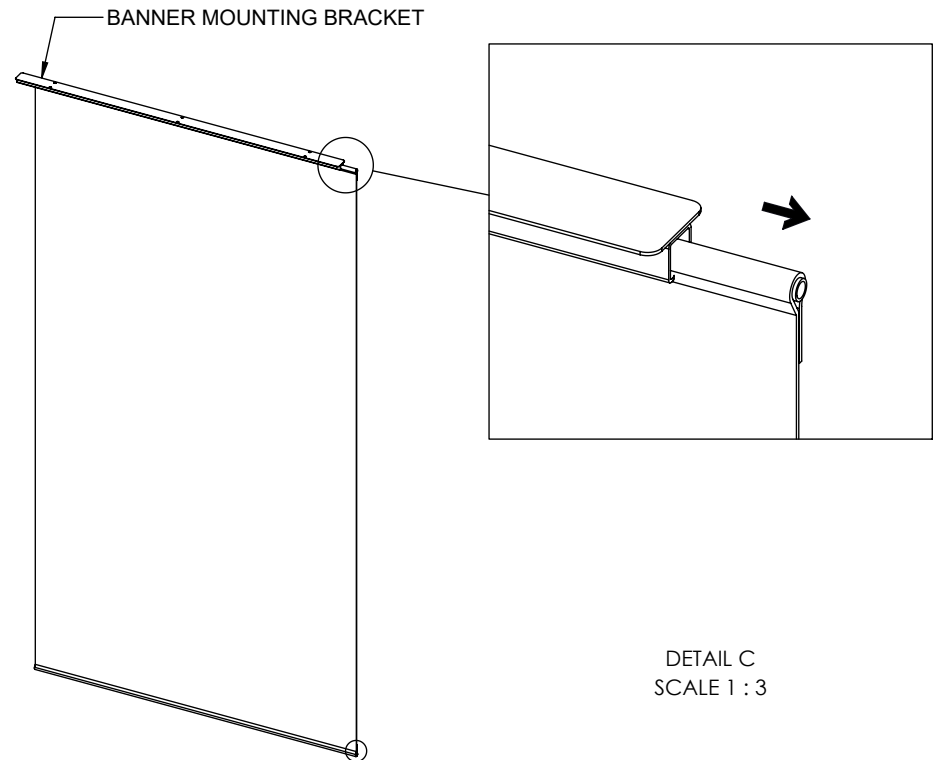

3

ATTACH (3) SCREWS ON ONE SIDE.
ATTACH (3) SCREWS ON THE OTHER SIDE.

ONE PERSON WILL NEED TO HOLD THE
BANNER UP WHILE ANOTHER PERSON
INSTALLS.

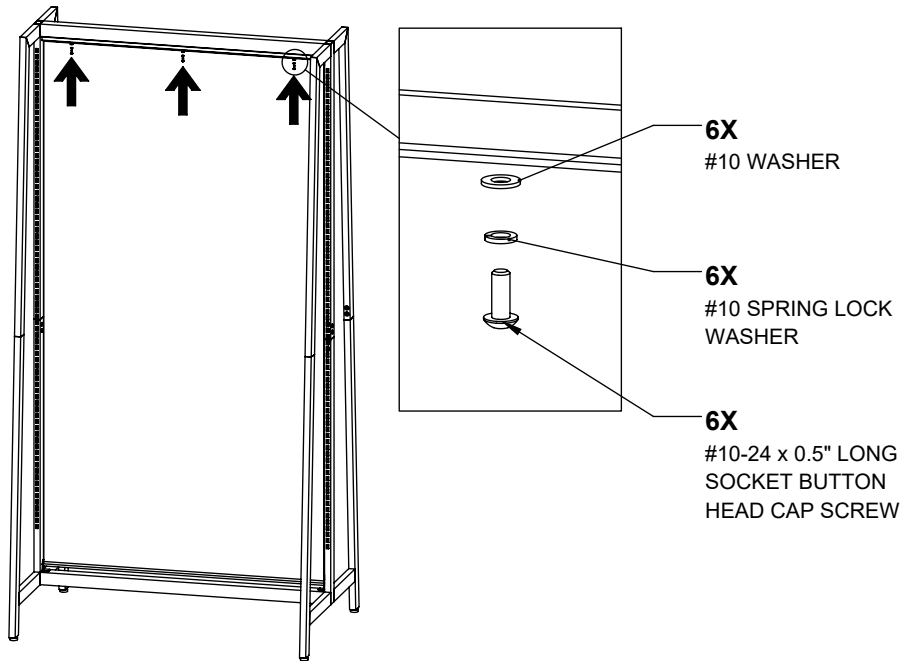

4

LIFT BANNER AND SCREW
RETAINING BRACKET ONTO
BOTTOM BANNER HANG BAR.

CONNECTION SHOULD BE SNUG
BUT NOT OVERLY TIGHT.

PLACE ONTO BOTTOM TUBE OF
#APFS96. THE MAGNET WILL PULL
THE BANNER TIGHT.

ADJUST THE RETAINING BRACKET
UP AND DOWN FOR A GOOD FIT
BETWEEN THE BANNER AND
#APFS96.

