


ACRYLIC SHIELD

Item # ACSHLD2, ACSHLD2W

2 PEOPLE
NEEDED FOR
ASSEMBLY

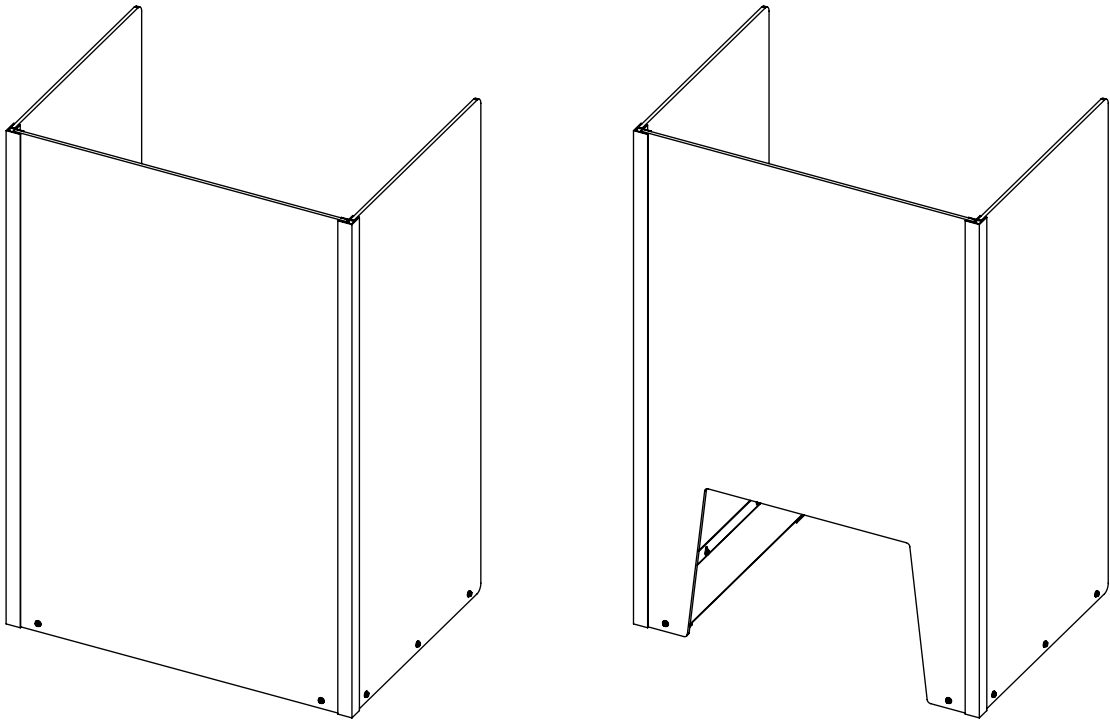

INCLUDED HARDWARE

M4 LOW PROFILE
SOCKET CAP SCREW

8 SETS

M5 NYLON WASHER


M4 BARREL

3M DUAL LOCK
QTY. 4

ALLEN KEY
QTY. 2

1


LAY FRONT PANEL ON CARDBOARD OR STYROFOAM TO PREVENT SCRATCHING.
ASSEMBLE THE GRIP CHANNELS ONTO THE FRONT PANEL.
USE EVEN PRESSURE TO PREVENT ACRYLIC PANEL FROM CRACKING.

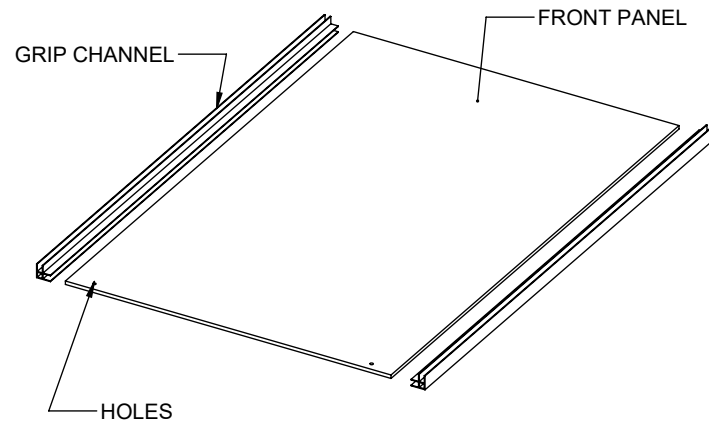

3

IF YOU WANT TO VELCRO THE UNIT TO COUNTERTOP, PEEL OFF ONE SIDE OF THE VELCRO AND STICK IT TO THE METAL BASE.
DO NOT PEEL BOTH SIDES OF THE VELCRO.
REPEAT FOR OTHER METAL BASE.


SKIP THIS STEP IF YOU ARE NOT GOING TO USE VELCRO.

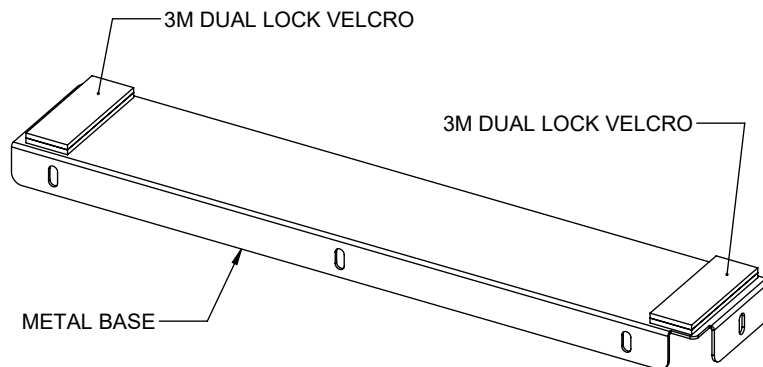

2

PRESS SIDE PANEL INTO GRIP CHANNELS.
MAKE SURE THAT THE ROUNDED EDGE IS ON THE OUTSIDE, AND THE HOLES FACE TOWARDS YOU.

USE EVEN PRESSURE TO PREVENT ACRYLIC PANELS FROM CRACKING.

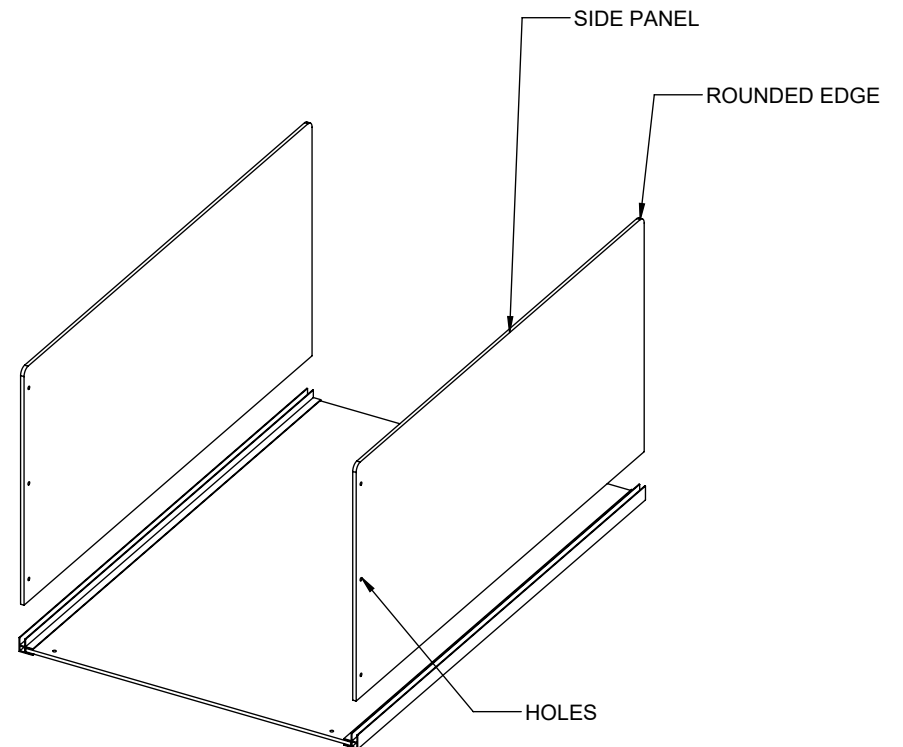


4

SLIDE THE UNIT FORWARD SO THAT THE BOTTOM IS OVER THE EDGE OF A TABLE TOP.

PLACE METAL BASE AT THE BOTTOM OF THE PANELS. ALIGN THE (3) HOLES ON THE SIDE, AND (1) HOLE IN THE FRONT.

HAND TIGHTEN SCREWS AS SHOWN.

METAL BASE SHOULD STILL BE ABLE TO SLIGHTLY MOVE AFTER HAND TIGHTENING SCREWS.

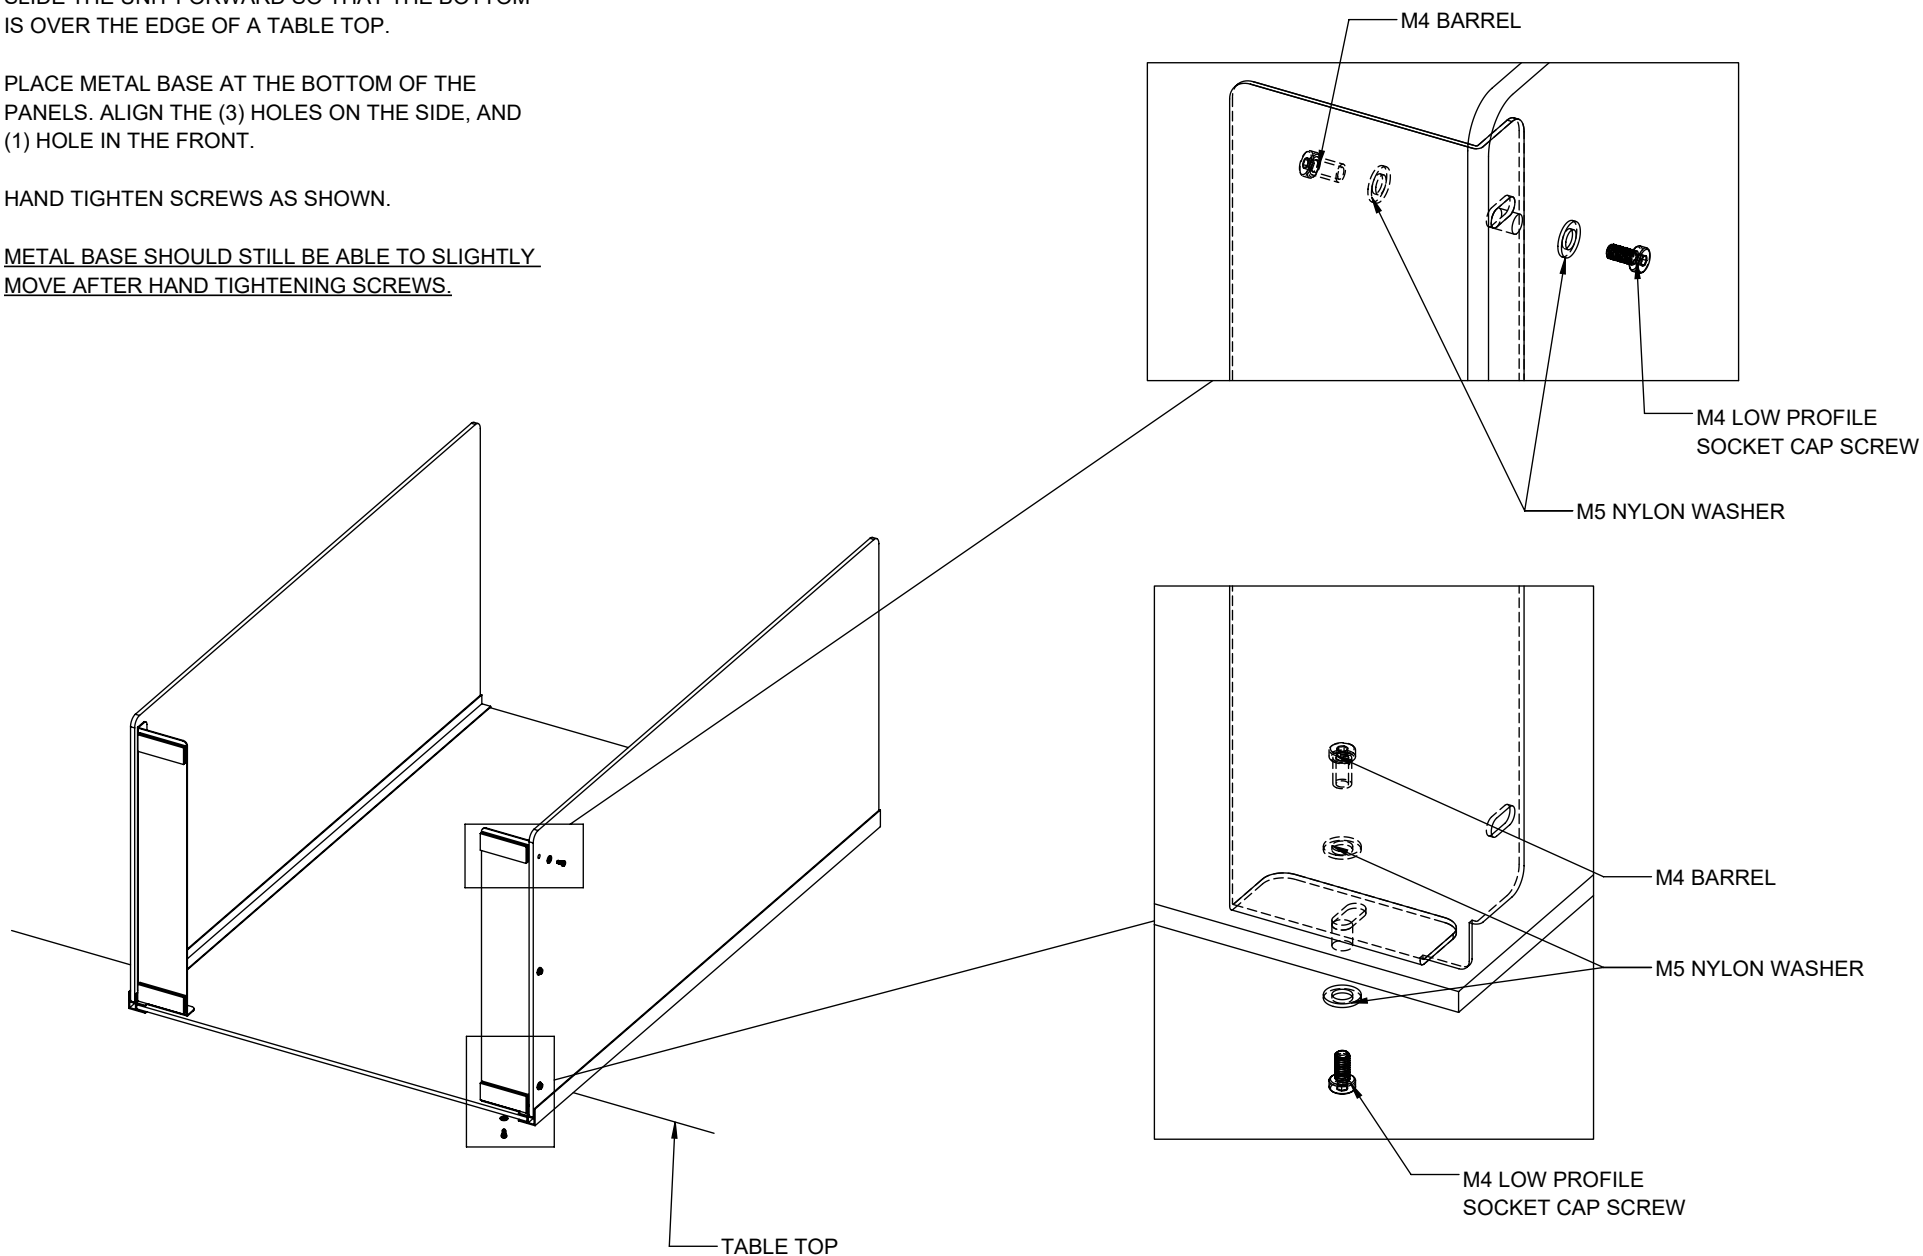


5

IF USING VELCRO:

DECIDE WHERE TO PLACE THE UNIT.
PEEL BOTTOM FROM VELCRO.

CAREFULLY TIP THE UNIT UP. HAVE ONE PERSON
HOLD THE SIDE PANELS WHILE TIPPING UNIT UP.

PLACE ACRYLIC SHIELD WHERE IT WILL BE USED.

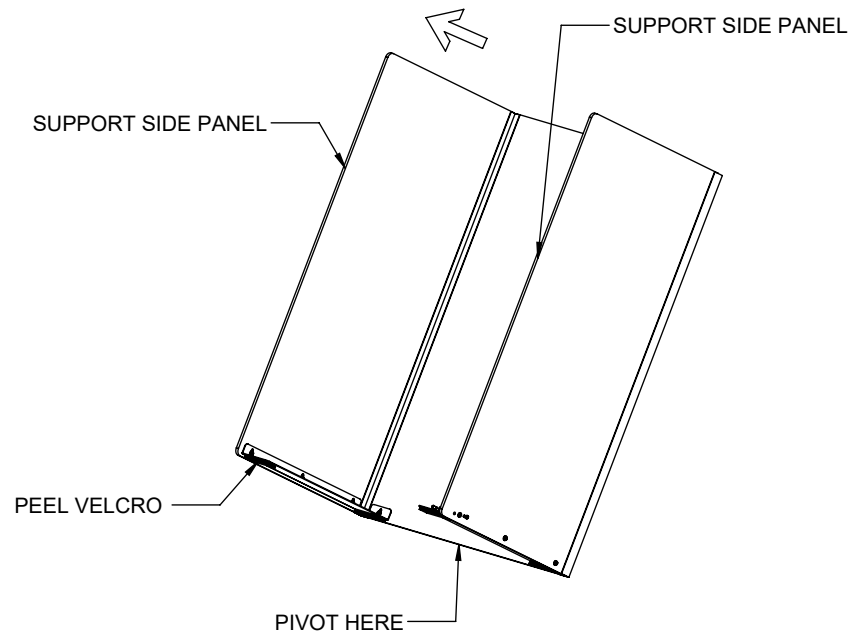


6

IF USING VELCRO:

PRESS DOWN ON METAL BASES TO ADHERE TO SURFACE.


TIGHTEN SCREWS:

HOLD INSIDE ALLEN KEY WHILE TURNING OUTSIDE ALLEN KEY..
REPEAT FOR ALL SIDE AND FRONT SCREWS.

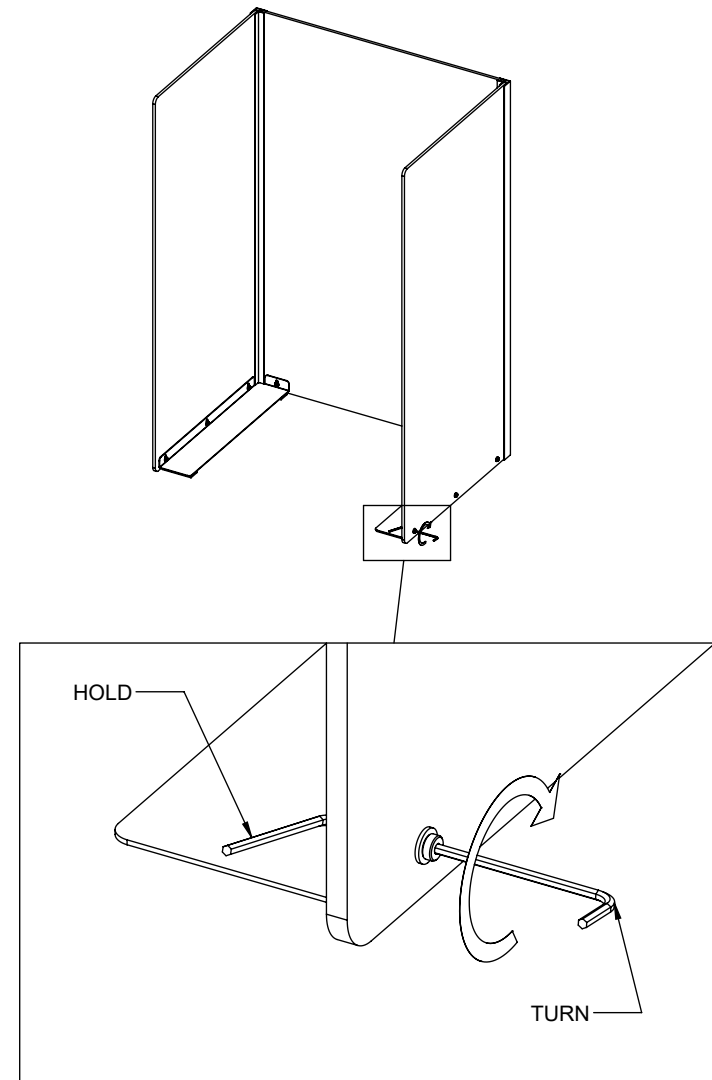


7

ASSEMBLY IS COMPLETE.

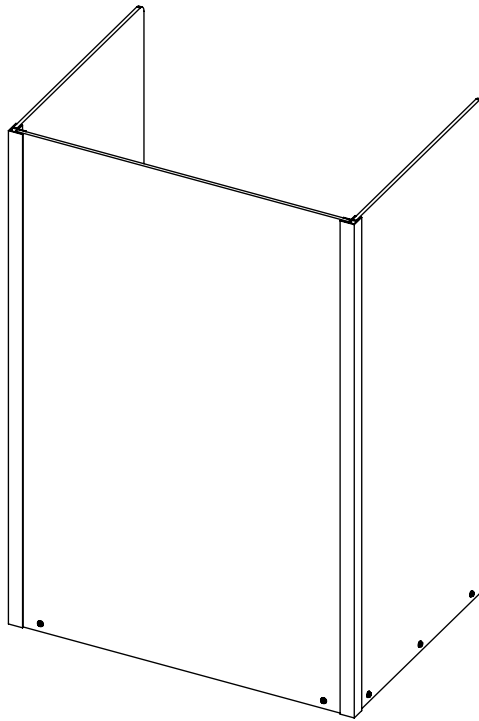

ITEM # ACSHLD2

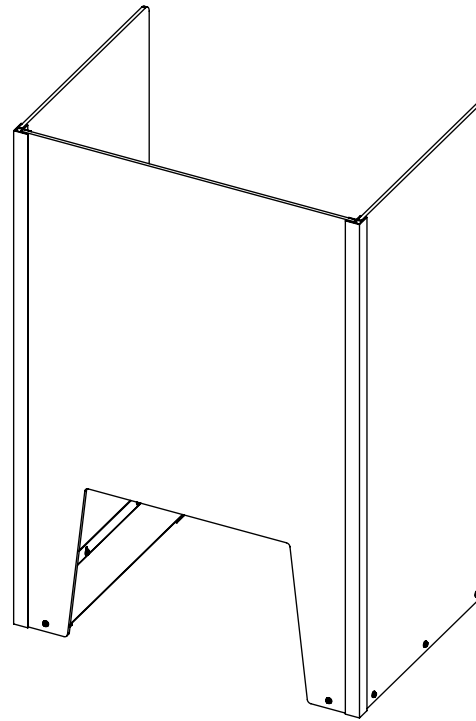

ITEM # ACSHLD2W